



## ► Installation system

### AXIS® D, DR et SR

#### INSTALLATION IN FORWARD SEQUENCE

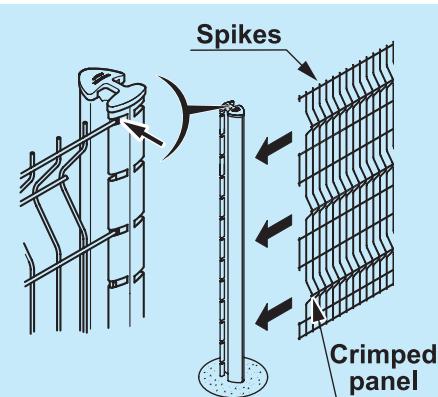


1 - Embed the first post and insert the first panel. (Swivel spikes at top and bottom.)

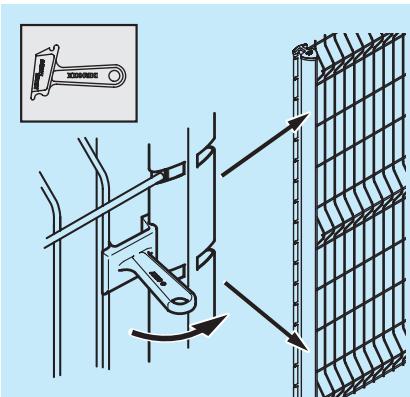


2 - Position 2 AXIS tension blocks or 2 AXOR wedges to hold the panel in position on the post while the embedding material sets.



3 - Insert the second post into the panel.

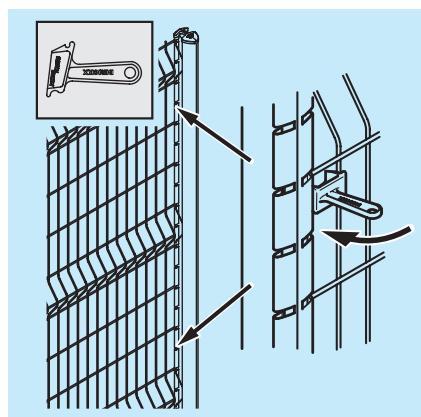


4 - Position 2 AXIS tension blocks or 2 AXOR wedges and embed the second post.

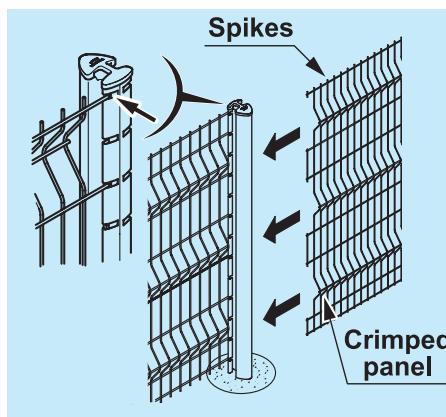

5 - Insert the second panel. Repeat operation. Once installation is complete, remove the AXIS tension blocks or the AXOR wedges (reusable).

#### AXIS post

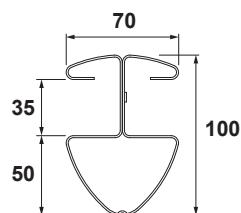

For:

- high,
- windy areas,
- safety and security options (extension arms, grounding)...

